



Ocularis™ Client/ Ocularis™ Client Lite

User Manual

On-Net Surveillance Systems, Inc.
One Blue Hill Plaza, 7th Floor, PO Box 1555
Pearl River, NY 10965
Phone: (845) 732-7900 | Fax: (845) 732-7999
Web: www.onssi.com

Ocularis Client 2.0

00011091001450-00OC1.1-0001

Legal Notice

This product manual is intended for general information purposes only, and due care has been taken in its preparation.

Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.

© 2002-2010 On-Net Surveillance Systems, Inc. All rights reserved. OnSSI and the 'Eye' logo are registered trademarks of On-Net Surveillance Systems, Inc. Ocularis, Ocularis Client, Ocularis Client Lite, Ocularis Video Synopsis, NetEVS, NetDVMS, NetDVR, ProSight, NetGuard, NetGuard-EVS, NetSwitcher, NetMatrix, NetCentral, NetTransact, NetPDA and NetCell are trademarks of On-Net Surveillance Systems, Inc. All other trademarks are property of their respective owners.

On-Net Surveillance Systems, Inc. reserves the right to change product specifications without prior notice.

Table of Contents

INTRODUCTION.....	1
OCULARIS CLIENT VS. OCULARIS CLIENT LITE.....	2
INSTALLATION AND LOGIN.....	3
MINIMUM SYSTEM REQUIREMENTS	3
INSTALLATION.....	3
<i>Installation from CD/DVD.....</i>	3
<i>Installation from the OnSSI website</i>	3
LOGGING IN TO THE OCULARIS CLIENT	4
OCULARIS CLIENT VS. OCULARIS CLIENT LITE.....	5
OCULARIS CLIENT VERSION	6
VIEWS.....	7
VIEWS AND VIEW GROUPS	7
<i>View Elements</i>	8
CREATING VIEWS AND VIEW GROUPS.....	9
SCROLLING MENUS	11
POPULATING VIEW PANES	11
<i>Populating a view pane with a Camera</i>	12
<i>Populating a view pane with a Hotspot.....</i>	12
<i>Populating a view pane with a Carousel.....</i>	13
<i>Populating a view pane with a Web Page or Image.....</i>	14
<i>Populating a view pane with Push Video.....</i>	15
<i>Saving changes and testing the View.....</i>	16
LIVE MONITORING WITH INSTANT PLAYBACK.....	17
DISPLAYING VIEWS.....	17
INSTANT PLAYBACK AND CAMERA CONTROL DURING LIVE MONITORING	18
<i>View Pane Controls</i>	18
<i>Instant playback tools</i>	20
<i>Two-way audio.....</i>	25
BROWSING (INVESTIGATION MODE).....	26
SHIFTING BETWEEN LIVE AND BROWSE MODES	26
THE BROWSE (INVESTIGATION) WINDOW	26
<i>The Scalable Kinetic Timeline</i>	27
<i>Browse Mode Controls</i>	28
MOTION DETECTION	29
<i>Applying motion detection to recorded video.....</i>	29
THE TIME SLICER	31
<i>Accessing video of an incident using the Time Slicer.....</i>	32
THE MOTION SLICER	34
<i>Accessing video of an incident using the Motion Slicer.....</i>	34
ALERTS.....	35
<i>Accessing video of an incident using Alerts</i>	35
SEQUENCES.....	37
<i>Accessing video of an incident using Sequences.....</i>	37
TRIGGERS.....	39

CLIENT SETUP	40
EXPORTING EVIDENCE (VIDEO AND STILL IMAGES).....	42
EXPORTING VIDEO EVIDENCE	42
<i>Designating a range for exporting video.....</i>	42
<i>Exporting an AVI video clip.....</i>	43
<i>Exporting a Video Database.....</i>	46
<i>Viewing an Exported Video Database.....</i>	47
<i>Exporting Still Images (individual frames)</i>	49
<i>Printing a Still Image Report.....</i>	51
<i>Bookmarks.....</i>	52
ALERTS	55
BLANK SCREEN MONITORING.....	55
<i>Using Blank Screen Monitoring</i>	55
<i>Alert Counter.....</i>	57
<i>Alert Priorities.....</i>	57
<i>Clearing an Alert from a Blank Screen</i>	58
ALERT MANAGER	59
LOCATING ALERTS ON A MAP	61
<i>Manually Locating Alerts.....</i>	61
<i>Automatic Alert Location.....</i>	61
STORING AND HANDLING EVENTS.....	62
<i>Handling Alerts</i>	62
ACCESSING STORED (HANDLED) ALERTS	63
<i>Sorting Alerts</i>	64
<i>Viewing Alerts</i>	64
<i>Exporting Alert Video.....</i>	64
OCULARIS MAPS	65
VIEWING OCULARIS MAPS	65
<i>Map Navigation.....</i>	65
<i>Image Preview</i>	66
<i>Image Arrange</i>	67
OCULARIS VIDEO WALLS.....	68
OCULARIS VIDEO WALL CONFIGURATION.....	68
USING A VIDEO WALL	68
<i>Changing Video Wall Panes.....</i>	71
<i>Managing Video in a Video Wall.....</i>	71

Introduction

Ocularis™ Client and Ocularis™ Client Lite are feature-rich IP video client/controllers that allow users to:

- Monitor live video from an unlimited number of cameras at multiple sites, with instant-investigation capabilities.
- Easily access and investigate alerts, generated by both motion detection and external systems.
- Send and receive automated push-live-video of alerts.
- Export video clips and still images for further event handling or as court evidence.

When a user logs directly into an NVR, the application is named: *Ocularis Client Lite*.

Using Ocularis Base, Ocularis Client features expand to include:

- An Alert Manager to handle alerts received to classify and assign to incident cases
- Bookmark exported video clips for sharing and easy retrieval
- Map displays to visibly manage campus and security environments
- Video Wall support
- VideoSynopsis

When a user logs into an NVR through Base, the application is named: *Ocularis Client*.

Both *Ocularis Client* and *Ocularis Client Lite* support the following languages:

English
Italian
Spanish
Portuguese
French

Ocularis Client vs. Ocularis Client Lite

This manual is used for both *Ocularis Client* and *Ocularis Client Lite* and differences between the two are noted throughout this documentation.

The Ocularis Client software application will dynamically change based upon the log in method used. If used to log into the NVR directly (i.e. use the NVR Server IP address and port number in the login screen), the application will behave as *Ocularis Client Lite*. If used to log into the NVR via Ocularis (and therefore uses the IP address of the Ocularis Base Server in the login screen), the application will appear as *Ocularis Client*. Additional features are made available with the full client. These features are documented in this manual.

Installation and Login

Minimum System Requirements

- Operating System*: Microsoft® Windows® XP Professional SP3, Microsoft® Windows® Vista Business or Ultimate, Microsoft® Windows® 7 Professional or Ultimate (32 or 64 bit)
- CPU: Intel® Core 2™ Quad CPU 2.8 GHz recommended
- RAM: 2 GB minimum
- Network: Ethernet (100 Mbit or higher recommended)
- Graphics Adapter: PCI-Express, 256 RAM, Direct 3D supported

Guidelines for Video RAM Requirements:

- 20 simultaneous Video Channels: 512 MB
- 35 simultaneous Video Channels: 1 GB
- 50 simultaneous Video Channels: 1.5 GB
- 64 simultaneous Video Channels: 2 GB

Video RAM requirements are regardless of number of attached monitors. Additional factors may affect video RAM requirements, including megapixel cameras, compression format, as well as video card and other system hardware specifications.

- Software: Microsoft® .NET 3.0 Framework and DirectX 9.0 or newer

Installation

Installation from CD/DVD

1. Insert the software installation disc. The installation main menu will automatically display.
2. Click on 'Software Installation' to initiate the installation. Click 'Accept' if a security warning appears
3. Follow all installation instructions.

Installation from the OnSSI website

1. Download the *Ocularis Client* installer from the OnSSI website.
2. Click on 'Software Installation' to initiate the installation. Click 'Accept' if a security warning appears
3. Follow all installation instructions.

Note:

In some cases you may be prompted to download and install one or more auxiliary software applications (typically .NET and DirectX). The installation wizard will guide you through the installation of these applications.

Logging in to the Ocularis Client

The login procedure to gain access to *Ocularis Client* or *Ocularis Client Lite* is very similar.

1. Launch the application (*Ocularis Client* or *Ocularis Client Lite*) from the Desktop icon. A login window will appear.
2. Enter your login information, as follows:



The Login Dialog

- **User Name and Password:**

The user name and password to enter depends on whether you are using the *Ocularis Client* to log in to the NVR directly or to log in to Ocularis Base. In either case, a user account and password is required to gain access to system video. Contact your system administrator for proper login credentials.

- **Server:**

The Server address entered here depends on your environment. If your organization has Ocularis Base, you should access NVR video by logging in to the Ocularis Base Server directly. If your company does not use Ocularis Base, log into the NVR directly.

If logging in through Ocularis Base:

Type the IP address of the Ocularis Server (e.g. 192.168.10.123). Including the port number is not required in most cases (when the port number = 80). Previously entered IP addresses can be selected from the drop-down list. A successful login will result in the display of the *Ocularis Client*.

If logging in to the NVR directly:

Type the host name or IP address of the NVR Image Server, including port number, as specified by your system administrator (e.g. 192.168.10.123:81). Previously entered IP addresses can be selected from the drop-down list. A successful login will result in the display of *Ocularis Client Lite*.

- **Authentication:**

Choose Basic or Windows, as instructed by your system administrator.

- **Store Last Login:**

All fields on the login page (User Name, Password, Server IP address and Authentication method) will be saved to facilitate easy entry upon subsequent logins.

- **Auto-Login:**


When the application is launched, this checkbox allows the system to automatically launch the *Ocularis Client/Ocularis Client Lite* and logs in to the designated server. When logging in with Windows authentication; checking the 'Store Last Login' check box is required.

To disable Auto-Login, once you successfully launch the *Ocularis Client/Ocularis Client Lite*, select Shutdown from the title menu and choose 'log out'. The login screen will appear; uncheck the Auto-Login box and log in again. You will be prompted to login the next time the application is started.

Ocularis Client vs. Ocularis Client Lite


The Ocularis Client software application will dynamically change based upon the log in method used. If used to log into the NVR directly (i.e. use the NVR Server IP address in the login screen), the application will behave as *Ocularis Client Lite* and provide its associated functionality. If used to log into the NVR via Ocularis Base (and therefore uses the IP address of the Ocularis Base Server in the login screen), the application will appear as *Ocularis Client*. Additional features are made available with the full client. These features are documented in this manual.

You can determine which mode of Ocularis you are using by clicking the *Views* menu within the application.

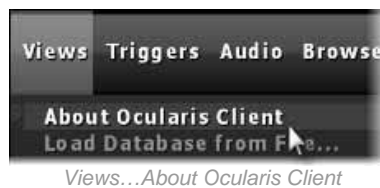

Ocularis Client Version

To view the version number of the installed Ocularis Client software, from the main menu, select *Views* → *About Ocularis Client*.

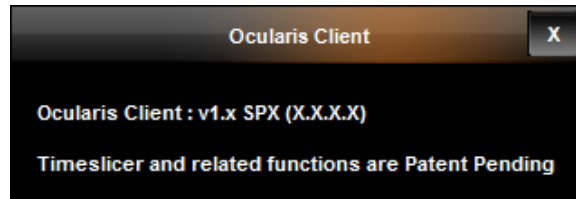

Ocularis Client or Ocularis Client Lite version

Views

Views and View Groups

In the *Ocularis Client*/*Ocularis Client Lite*, cameras are displayed within Views. A view can contain up to 64 cameras. Multiple views can be configured, and displayed simultaneously across multiple monitors.

When Using *Ocularis Client* (with *Ocularis Base*)

Operators have access to views created by an administrator. These views are organized by user group and are configured in the *Ocularis Administrator* application.

When Using *Ocularis Client Lite* (directly with an NVR, without *Ocularis Base*)

To easily access specific views, and to allow users to personalize their monitoring preferences, *Ocularis Client Lite* operators can access both Shared Views and Private Views, stored in groups and subgroups:

- Shared Views, usually created by the surveillance system administrator and stored on the NVR the user is logged in to, can be accessed by all users or by a group of users based on authorization.
- Private Views can be accessed only by the user that created them.

Note:

Legacy views created in OnSSI's NetGuard-EVS can be accessed and edited in Ocularis Client Lite (if connecting directly to the NVR).

If connecting to the NVR through Ocularis Base, users will only see views created within the Ocularis Administrator.

View Elements

Different panes within a view can be set to display video in one of the following modes:

- **Camera panes:**
Any camera from a connected NVR server can be displayed within a camera pane. Upon interaction, instant playback controls will appear, including controls for playback and optical and digital PTZ (when applicable).
- **Carousel panes:**
Cameras can be displayed in sequence, configured by order and dwell time. Carousel views also display all playback and PTZ controls, as well as controls for previous/next camera and pause/resume carousel.
- **Web pages and images:**
Web pages and images can be included in views as auxiliary resources.
- **Push Video panes:**
One or more Push Video panes can be configured to allow for peer-to-peer push video.
- **Blank Screen panes** (not shown):
Supported when using Ocularis Base, one or more panes can be configured to receive event driven alert video.
- **Hotspot pane** (not shown):
Usually configured in a large pane, the hotspot will display cameras by clicking on a camera, alert or carousel pane. Once sent to the hotspot, the original and the hotspot displays can be controlled independently.



Creating Views and View Groups

Views used with *Ocularis Client Lite* are created in its 'Setup Utility' and is discussed below.

Views used with *Ocularis Client* are created in the *Ocularis Administrator* application by a system administrator. For instructions on creating these views, refer to the *Ocularis Administrator User Manual*.

1. In *Ocularis Client Lite*, click on the 'Setup Utility' icon, located on the right-hand side of the menu bar. The icon will appear when hovering over it.


The Setup icon



Note:

Access to the Setup utility can be limited to authorized users by changing their privileges in the NVR's user management utility.

The View Setup/Editing utility is displayed.

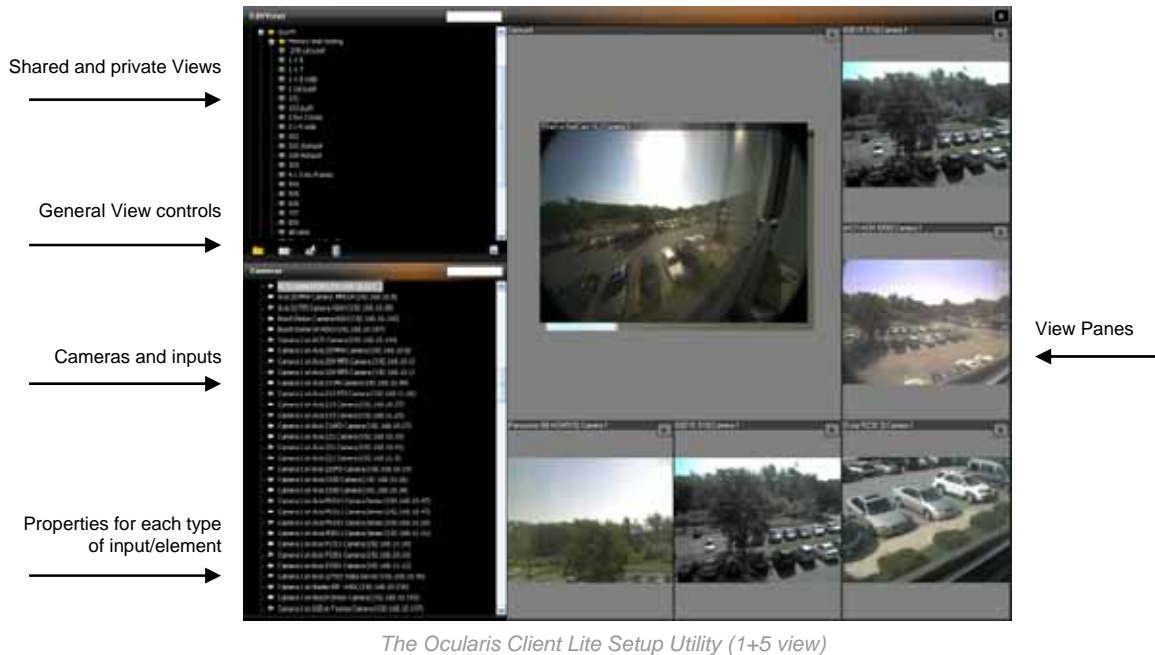

Views are organized within folders or 'View Groups'. Folders labeled 'Shared' are views that can be accessed by all users. Those labeled 'Private' are views that are accessible only by the user who created them.








The View Tree structure

The 'Edit Views' search box enables easy access to views. Any character (number or letter; not case sensitive) or combination of characters will filter the views list to only the views containing the character or string of characters entered, highlighting those characters within the views' names.

Note:

The ability to edit either views can be limited based on the user's privileges on the NVR Image Server Administrator utility.

2. To create subfolders, highlight a folder, and click the 'New Folder' icon , located on the bottom left of the Folders/Views pane.
3. To create a view within a folder, click on the 'Create View' icon . This will open a submenu of view layout templates, for both regular (3:4) and widescreen display aspect ratios.
4. At any point during the View creation process, you can:
 - Rename , and Delete  Views
 - Save changes, without closing the editor; 

Scrolling Menus

At any point with the *Ocularis Client/Client Lite*, if a menu list is longer than available screen real estate, you can scroll the menu. Use a click and drag motion up or down with the mouse, similar to many touch phone interfaces, to move the menu list up or down.

Populating View Panes

View panes are populated with cameras, hotspots, carousels, web-pages, images, blank screens and push video components. To populate a pane using *Ocularis Client Lite*, simply drag and drop the desired element from the Cameras panel into the pane. If the pane is already populated, the dragged view element will replace the previous element.




The Cameras panel in the Setup utility

Populating a view pane with a Camera

In *Ocularis Client Lite*'s Cameras panel in the setup utility, click on the [+] sign beside 'Cameras' to expand the list of cameras available through the NVR server.

The 'Cameras' search box enables easy access to cameras by name. Any character (number or letter; not case sensitive) or combination of characters will filter the cameras list to only the cameras containing the character or string of characters entered, highlighting those characters within the cameras' names.

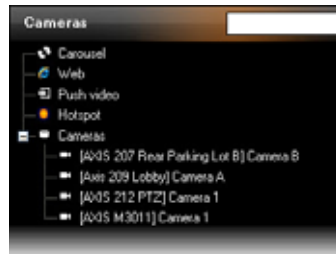

List of cameras connected to an individual NVR server

1. Drag the desired camera into one of the view panes. An image from the camera view, as well as the camera name, will appear in the pane.
2. To display a different camera or view element, simply drag another camera or view element into the pane.

Populating a view pane with a Hotspot

Hotspots are usually used in a layout made of one or more large view panes surrounded by smaller panes. In a view containing hotspots, selecting a hotspot and clicking on any other pane will send the camera displayed in the pane to the hotspot. This applies only to camera, push-video and carousel panes.

1. From the *Ocularis Client Lite* Cameras panel in the setup utility, drag and drop the 'Hotspot' label into the desired View pane.
2. Set the hotspot display parameters for the quality, framerate and aspect ratio of the video displayed in the hotspot in the Properties panel. Adjust these properties based on the type of camera, amount of bandwidth consumed by the camera and type of movement displayed.




Properties setup for a Hotspot pane

Populating a view pane with a Carousel


The Carousel mode of viewing enables sequential monitoring of multiple cameras. *Ocularis Client/Client Lite* provides full interaction with the carousel pane, including playback, PTZ (optical and digital) and carousel sequence controls.

1. From the *Ocularis Client Lite* Cameras panel in the setup utility, drag and drop the 'Carousel' label into the desired View pane. This will automatically change the contents of the Properties panel.

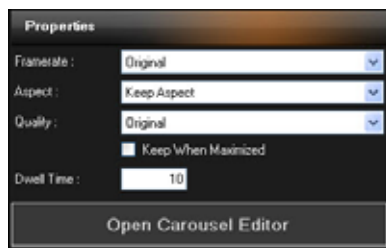


Global properties setup for a Carousel pane

2. Set the global Carousel display properties for framerate, aspect ratio, quality, dwell time and whether to maintain these settings when the pane is maximized. Adjust these properties based on the type of camera, amount of bandwidth consumed by the camera and type of movement displayed.
3. Click on 'Open Carousel Editor' to add cameras to the carousel.
4. Expand the cameras list, drag and drop the desired cameras into the carousel list (the area on the right which initially is blank).

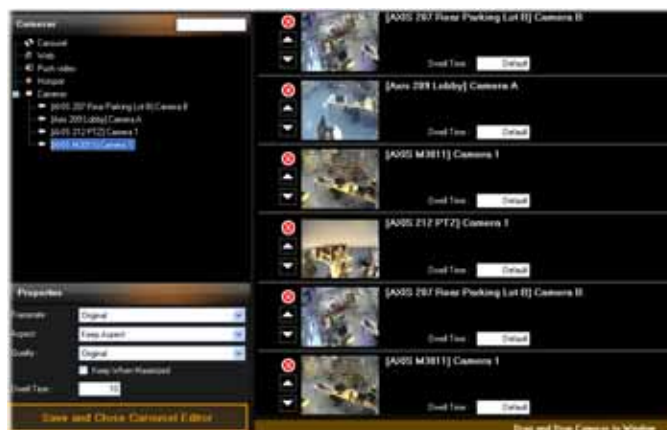

The Carousel cameras list


5. Each camera in the carousel can be configured for placement in the carousel sequence (using the up and down arrow buttons). To remove a camera from the carousel, click the delete  icon.

6. You may also change the default dwell time on a camera by camera basis.
7. Click on 'Save and Close Carousel Editor' in the Properties panel to save the carousel contents and display parameters. This will display the View with the carousel cameras stacked one above the other. You can browse through the carousel cameras by clicking on a camera in the stack.

Populating a view pane with a Web Page or Image

Any view pane can display a web page or a static bitmap image (JPEG, BMP, PNG or GIF). Panes with images or web pages may not be maximized so be sure to use a pane large enough to be worthwhile for the display of the web page or image.

1. From the *Ocularis Client Lite* Cameras panel in the setup utility, drag and drop the 'Web' label onto the desired View pane. This will automatically change the contents of the Properties panel.
2. In the 'Url' Properties text box, enter the local or remote address of the web page or the image to be displayed, e.g. 'http://www.onssi.com' or 'D:\building_14_floor_plan.png'.

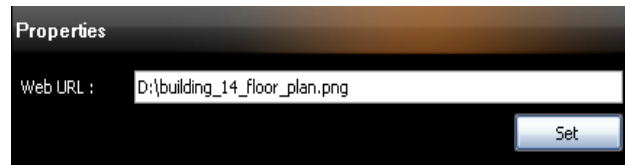

Properties setup for browser or static image panes

3. Click on 'Set' to display the web page or image.

Note:

Ocularis Client's web page utility may not support all navigation and display capabilities of full-fledged web browsers, and thus should not be used as a replacement for a web browser for mission-critical tasks.

Populating a view pane with Push Video

For *Ocularis Client Lite*, Push Video panes may be configured to display video on-event live video stream alerts as well as peer-to-peer push video. This is configured in conjunction with the NetMatrix push-video utility.

For *Ocularis Client*, Push Video panes are used solely for logged in Ocularis users to push video to each other (peer-to-peer). The configuration is done in the *Ocularis Administrator* application.

Ocularis Client Lite can accommodate multiple Push Video panes. In such a case, events will be displayed in first-in-first-out order, rotating between the different Push Video panes.


1. In *Ocularis Client Lite*'s Cameras panel, click the 'Push Video' icon and drag it into the desired View pane. This will automatically change the contents of the Properties panel.



Properties setup for Push Video panes in Ocularis Client Lite

2. Set the display properties for video (framerate, aspect ratio and quality). Adjust these properties based on the type of cameras in the system, available bandwidth and type of movement to be displayed. If you want to maintain these video settings when the pane is maximized, click the 'Keep When Maximized' checkbox.
3. The 'Window Index' field is used when there are more than one Push Video panes in the same view. In this case, select the display order for the pane. For instance, if there are four Push Video panes in a single view, you can specify which pane should receive the first push video alert, which should receive the second, and so on.
4. Enter the (TCP/IP) port and password as defined in NetMatrix (for more information, please refer to the NetMatrix user manual.) All Push Video panes share the same NetMatrix TCP/IP port number.
5. Click the 'Save' icon to complete the push video setup.

Saving changes and testing the View

1. Once you've completed populating all of the view panes in *Ocularis Client Lite*, it is important to save the changes made, by clicking on the 'Save'  button.
2. To test the view, exit (close) the View Setup utility. The newly-created view will be displayed on the main *Ocularis Client Lite* panel.

The method of launching views and interacting with video is described in the following sections.

Live Monitoring with Instant Playback

Displaying Views

Once views are created, either with *Ocularis Client Lite* or in *Ocularis Administrator*, they can be displayed and operated.

To display a view in *Ocularis Client* or *Ocularis Client Lite*:

1. Click on the 'Views' menu item.
2. Click on the desired View Group / Folder to expand the list of views; continue to expand folders and subfolders until you reach the desired view.
3. Click on the desired view. Depending on your system's settings, it may take a few seconds until all panes are populated. A blinking green indicator will indicate a live video stream from the camera.



The Live Monitoring window

Instant Playback and Camera Control During Live Monitoring

Ocularis Client/Client Lite provides multiple tools for adjusting the contents of view panes, sending video alerts, and on-the-fly investigation of the video displayed.

View Pane Controls

Pane vs. full-screen (maximized) display modes

Click on the camera pane top bar (which displays the camera name) to toggle between multiple camera view and full screen display modes.

Circular Control

Right-click on a camera view, or left-click (or touch) and hold for one second, to display the 'Circular Control' Menu.



The Circular Control menu


Note:

When interacting with PTZ cameras, a Virtual Joystick control will appear in the center of the camera pane upon mouse-over or clicking. To display the Circular Control menu using left-click or touch, you must click or touch the pane off-center (i.e. any point except the center of the pane).

The 'Circular Control' provides a quadrant with four functions:

1. [Switch/Display Cameras](#)
2. [Copy to Clipboard](#)
3. [Clear a camera from a pane](#)
4. [Push Video](#)

Switch/Display Cameras

Click the camera icon [] at the top-right quadrant of the circular control to display the camera list.
Click a camera to display it in the desired pane.

 
Click-drag to scroll up and down the list, or click on a Quick-Link (highlighted capital letter) to display the camera names that begin with that letter.

Note that on-the-fly changes are only temporary, and will not affect the saved view.




Copy to Clipboard

Right-click on a camera view, or left-click (or touch) and hold for one second, to display the 'Circular Control' Menu.

Click on the Clipboard icon  in the bottom-right quadrant of the circular menu. This will save a still camera image to the clipboard which can be pasted into different applications for later use.

Clear a camera from a pane

Right-click on a camera view, or left-click (or touch) and hold for one second, to display the 'Circular Control' Menu.

Click on the Remove Camera icon  in the bottom-left quadrant of the circular menu to remove the camera from the pane.


Note:

Removing a camera from a view pane as described above will only delete it temporarily; permanent removal of a camera from a view can only be done modifying the view.

Push Video

Live video can be pushed manually, as described herein, to other users' designated Push Video panes (see 'Populating a View Pane with Push Video' in the 'Configuring Views' section, page 15.)

To manually send video, right-click on a camera view, or left-click (or touch) and hold for one second, to display the 'Circular Control' Menu.

Click on the Push Video icon  in the top-left quadrant of the circular menu. This will display the recipients list.

- For *Ocularis Client* users, the list will display all users currently logged in to the Ocularis Base-Server.
- For *Ocularis Client Lite* users, the list of configured NetMatrix recipients appears.

Click on a recipient to send live video; click-drag to scroll up and down the list. The recipient must have a view with a Push Video pane visible in order to see the video.



The Push Live Video recipients list

Note:

Please refer to the NVR user manual for NetMatrix Push Video Configuration when using Ocularis Client Lite.

Instant playback tools

▪ **Playing back video**

Upon mouse-over, whether in full-screen or pane mode, playback controls will appear in the pane.



Click continuously on the 'Forward' (right arrow) or 'Rewind' (left arrow) buttons to review video. Releasing the buttons will pause the video stream. Note that clicking on the 'Forward' button while viewing live video will pause the video stream.

Pause a live video stream by using the 'Pause' button. When the video is paused, the pause icon will change to a heart symbol; to resume live video, click the heart-shaped 'Live' [♥] button.

▪ **Applying Digital PTZ**

Digital PTZ can be applied to video in any mode or pane, live or recorded.

To apply digital PTZ, click-drag or touch-drag a rectangular region within the camera view. The selected region will expand to the entire size of the camera display. Note that the default for optical PTZ cameras is optical zoom, therefore the 'Digital PTZ' option must be selected prior to drawing a Digital PTZ region.



Digital PTZ in live monitoring mode. Not the PIP window (upper right)

Once a Digital Zoom region is created, a PIP (picture-in-picture) of the entire camera view, indicating the selected digital PTZ area, will appear in the top right corner of the camera view, for orientation and navigation. The selected area can be dragged within the PIP, maintaining the same magnification level.

Click or touch the camera view (outside of the PIP window) to remove the digital PTZ and return to normal camera view.

▪ Optical PTZ

Ocularis Client/Client Lite offers a number of methods for controlling PTZ-enabled cameras.

1. Click to Center: click on any point within the camera view to center the camera on it.
2. Virtual Joystick: hover over or touch the center of the camera view to display the virtual PTZ joystick handle, and drag it in any direction for continuous panning and tilting.



The Virtual PTZ Joystick

3. Physical joystick: standard USB joysticks can be used to pan, tilt and zoom the camera view. This may require configuring the joystick buttons.
4. Click-drag/touch-drag region: draw a region within the camera view to center the camera and set the zoom level.
5. Mouse Scroll Wheel: optical zoom in/out can be applied in any mode (including digitally-zoomed camera views) using a scroll-wheel mouse.

6. Zoom control ribbon: click on any point on the zoom ribbon, or use the [+] and [-] buttons, to set the zoom level.



The Zoom Control Ribbon

7. Optical PTZ presets: Click on the 'Presets' button alongside the playback controls to display the PTZ presets as configured in the NVR (see the NVR user manual for more information). This will display the presets list.

Click on an item on the list to display the PTZ preset, or click-drag up and down to scroll the available presets.



The Optical PTZ Presets list

8. Toggle between optical and digital PTZ: Click the 'Optical PTZ' button to toggle between digital and optical PTZ.



Note:


Not all controls are available in conjunction with every PTZ camera model.

Note:

While users may have the ability to view video from a PTZ camera, they may not have the privilege to control its functions. These privileges may be set for the user within the user settings of the NVR or Ocularis Administrator.


- **PTZ Control for ImmerVision's IMV1 1/3 Panomorph lens**

ImmerVision's IMV1 1/3 Panomorph (360-degree) lens, when attached to static IP cameras, provides a constant 360x180-degrees (half-sphere) field of view, thus replacing multiple static cameras, each of which pointing to a segment of the Panomorph lens's view.

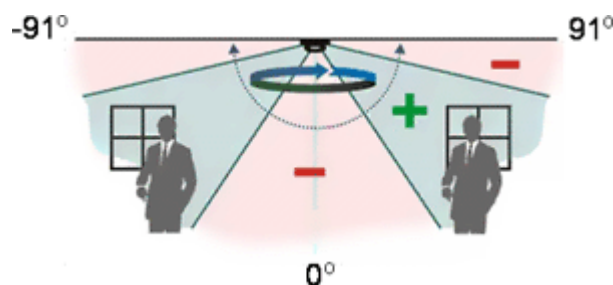

ImmerVision's Panomorph Lens

Ocularis Client/Client Lite enables parsing the spherical ('fish-eye') video stream, received from cameras equipped with the Panomorph lens, so that it appears un-skewed, resembling the image received from a camera equipped with a standard lens.

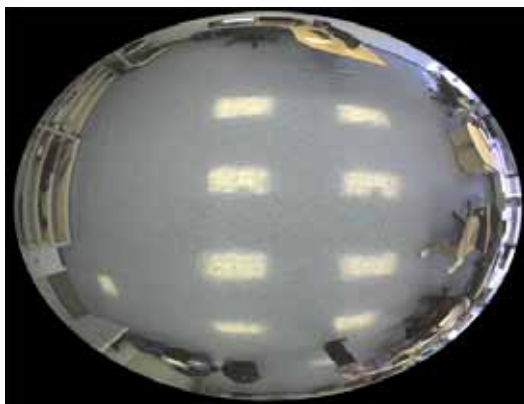

Panomorph view, unparsed

Panomorph-equipped cameras are displayed in *Ocularis Client/Client Lite* in either Single or Quad view. In Quad view, four instances of the camera will populate a single camera pane, with individual digital PTZ control (see herein). By 'pointing' each quadrant at a different direction and setting different zoom settings, a single Panomorph camera pane can provide 360-degree coverage for large halls and open areas.



360-degree coverage using Quad Panomorph view, populating a single camera pane.

Controls for Panomorph lens views include:

- Playback controls (standard; forward, back and pause)
- Quad-to-Single toggle – click on the [360] button to display the [Single] and [Quad] buttons, which toggle between a single and a four-quadrant view of the camera. This option is available whether the Panomorph camera is in a view of its own, or is part of a multi-camera view alongside other cameras.



Panomorph View Controls

- Virtual Joystick – clicking on any point within the camera view and moving the cursor in any direction will create a pan/tilt effect, resembling that of an optical PTZ camera.

 
Moving the cursor down will, in ceiling-mounted cameras, cause the camera view to face upward; moving the cursor left and right will move the camera view in the opposite direction, at a speed relative to the length of the horizontal gesture.

Clicking on the center of the camera view in single mode, and in the intersection of the four quadrants in quad mode, will display the Virtual Joystick cursor, which provides a visual indicator to the PTZ control.

- Zoom In/Out – to zoom in and out, use the Zoom Ribbon on the right side of the screen, or the mouse wheel if available. At a certain zoom level, the camera view will revert to the original, pre-parsed 'fish-eye' view.
- Presets – currently disabled (will be available in subsequent release).

▪ Carousel sequence control

Carousel panes can be controlled just like any other camera pane, for playback, digital PTZ and optical PTZ.



The Carousel Sequence controls; left to right: previous camera, pause/resume sequence, next camera

In addition, *Ocularis Client/Client Lite* enables skipping to the next and previous camera in the carousel sequence, as well as pausing the sequence.

Once paused, the carousel will show the current camera indefinitely. To resume the carousel view, click on the previous or next camera buttons.



Two-way audio

Ocularis Client/Client Lite enables both listening to audio from camera-connected microphones and sending audio to camera-connected PA (public address) systems. All camera-connected audio devices must be configured in the NVR.

Cameras with connected audio equipment will display audio icons in the top right corner of the screen, for listening to camera connected microphone (below left) and sending audio to camera connected PA (below right).



The two-way audio icons

Clicking on either icon will disable the feature, indicated by [ ]. Note that audio icons appear only upon mouse move, together with all other playback and PTZ controls). Audio controls are also visible from 'Audio' on the main menu.

Browsing (Investigation Mode)

Ocularis Client/Client Lite's Browsing mode includes a variety of tools for quick, easy access to video of incidents, reviewing the events before, during and after the incident, and for exporting segments of video for evidence.


Shifting between Live and Browse modes

In the top menu bar, click *Browse* to shift to Browse mode. Once in Browse mode, the menu item will change to *Live* for returning to Live monitoring.

Upon switching between Live and Browse modes, the currently displayed camera view will carry between the modes. This includes current cameras displayed in full screen, carousel panes, hotspots push-video panes.

As opposed to the Live Monitoring view, which displays multiple cameras asynchronously (i.e. different panes can show playback, paused and/or live cameras simultaneously), the Browse mode displays all cameras synchronously. This provides insight as to the events taking place at different locations at the time an incident occurred, and allows easily tracking an incident as it moves from camera to camera.

The Browse (Investigation) Window

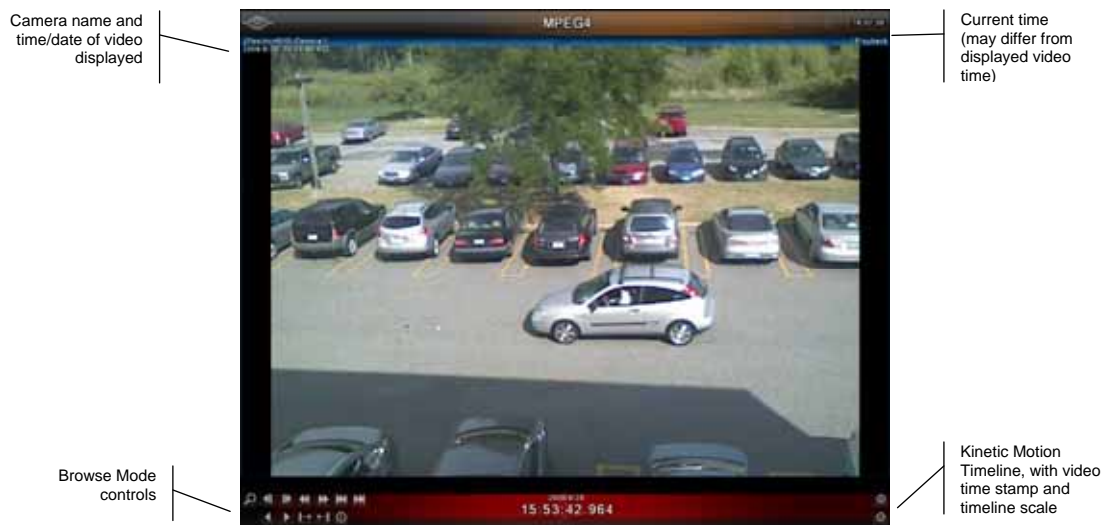


The Browse Window

Ocularis Client/Client Lite's Browse window offers a number of tools and methods for accessing and enhancing video of incidents:

The Scalable Kinetic Timeline

The Kinetic Timeline provides a clear overview of recorded motion events over extended periods of time. It can be used for reviewing video from multiple cameras simultaneously at variable speeds, for quick access to video of incidents.

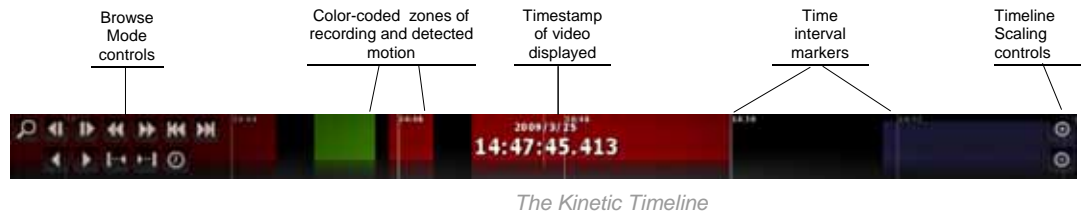

▪ **Timeline Color-Coding**

Color-coded segments in the timeline are used to indicate whether video has been recorded at a certain time, and whether motion was detected during those periods:

- Black: no video was recorded
- Green: video was recorded, but no motion has been detected
- Red: video was recorded, containing motion events
- Blue/Purple: indicates the future, starting from the current time

▪ **Scaling the timeline**

Use the [+] and [-] buttons on the right to scale the timeline, thus extending or contracting the time period displayed. As the Timeline is scaled, marker lines spaced at 10-minute increments will contract or expand.

▪ **Playing video using the timeline**


The Kinetic Timeline allows for quickly scanning extended portions of recorded video from one or multiple cameras. 'Swiping' the timeline (rapidly dragging and releasing while still in motion) in either direction will play the video at a speed proportional to the speed of the swiping motion. The Kinetic Timeline can also be used for 'shuttle'-style playback by click-dragging the timeline in a slow, controlled manner.

▪ **Using the timeline in multiple-camera views**

In multiple-camera views, the Kinetic Timeline at the bottom of the Browse window refers to the selected camera (indicated by a blue frame around the camera view pane), while all other cameras maintain an individual timeline at the bottom of each camera pane. Click on another camera pane to select it; this will automatically associate the main Timeline with the newly-selected camera.

Browse Mode Controls

Ocularis Client/Client Lite's Browse Mode Controls allow for precise playback control and access to events by motion sequence, frame-by-frame playback, normal-speed playback and time/date. This group of controls also provides access to the motion detection toolbar, and is used to search recorded video for motion in a defined area of the view.

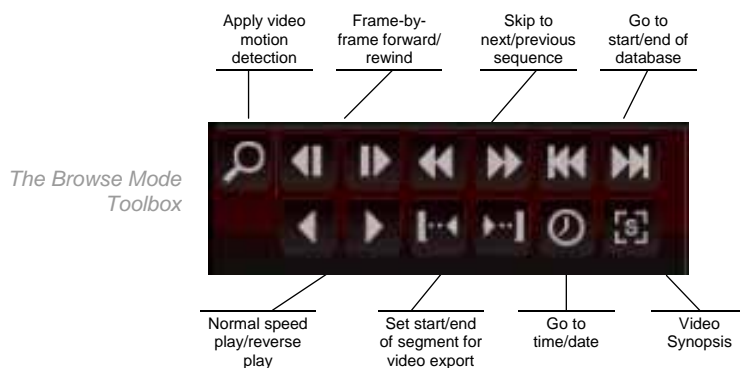

- **Apply Video Motion Detection**

Transition to Motion Detection mode (described in the next section)

- **Frame-by-frame forward/rewind**

Review video frame-by-frame in both directions.

- **Next/previous motion sequence**

Motion sequences display the actual starting point of detected motion occurrences.

- **Go to start/end of database**

Access directly the beginning of the video database and the current time.

- **Normal speed playback**

Review recorded video at normal speed, both forward and backward. Click on the timeline to pause.

- **Set start/end of bookmark**

Graphically set the start and end points of video segments. This is used when exporting video as evidence (described in the 'Video Export' chapter)


- **Go to Time/Date**

Access video from a specific time and date; scroll up and down the time unit rollers to set the exact time and date.



The time/date utility


▪ VideoSynopsis


For cameras that are enabled for VideoSynopsis, click the VideoSynopsis symbol  to open the Ocularis VideoSynopsis viewer and investigate recent events.

Motion Detection

Motion detection enables expediting the event detection process, by eliminating the need to manually review volumes of video data. Motion can be detected within a defined zone, and the detection process can be configured to the exact parameters of the targeted behavior or movement.

Applying motion detection to recorded video

1. Click on the Motion Detection button  in the Browse Mode toolbox. This will replace the Browse Mode controls with the Motion Detection Controls.

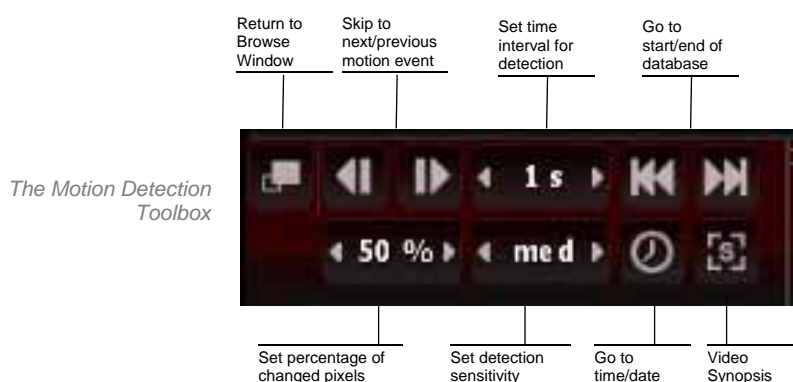

2. Draw a rectangular region in the camera pane. A motion level gauge will appear on the bottom of the region.
3. Set the motion detection parameters, to match the nature of the targeted movement:
 - **Time Interval (sampling rate)**
Set this parameter based on the duration of the motion event. Set a high sampling rate (e.g., frame-by-frame) for vehicles on a roadway, as they may enter and exit the detection region within a fraction of a second. On the other hand, large values should be set for slow moving persons or objects. Available values are frame-by-frame (FBF), 1, 5, 10 and 30 seconds.
 - **Percentage of changed pixels**
Set this parameter based on the size or area of the movement, relative to the detection region. For example, set a high value or detecting a vehicle entering a detection region the

size of a single parking space; this will prevent false detections of persons walking in the parking lot. Values range from 1% to 99%.

- **Sensitivity**

This parameter defines the amount for pixel color and brightness change. Set this parameter according to the amount of 'noise' caused by ambient lighting, shadows, reflections from windows, etc.


4. Set the start time for motion detection. Use the 'Go To Time/Date' utility, skip to the beginning or end of the recorded video database, or drag the timeline to the desired time and date.
5. Click the 'Skip to Next/Previous Motion Event' to begin searching, going either back or ahead in time.
6. Adjust the time interval, pixel change and detection sensitivity parameters if too many or too few motion events are detected.
7. Click 'Return to Browse Mode' to return to the primary Browse Mode view.

The Time Slicer

Ocularis Client/Client Lite's Time Slicer functionality enables users to easily and quickly access video of an incident by auto-generating equal-interval thumbnails of a specific camera view. Once the incident is evident in one of the thumbnails, the user can create sets of thumbnails of increasingly smaller time intervals, towards accessing the exact moment the incident began or ended.



Accessing video of an incident using the Time Slicer

1. In Browse Mode, click on the Timeslice menu item.
2. The Time Slicer will generate thumbnails of the currently selected camera view, spaced 10 minutes apart, starting from the currently displayed time-stamp and back in time. The Timeslice Current View pane displays the camera view at the current time stamp (indicated on the Kinetic Timeline.)
3. For convenient detection limited to a certain part of the camera view, you may apply digital zoom by drawing a rectangular region in the Timeslice Current View. This will change the zoom level in all Timeslice thumbnails.
4. Depending on the nature of the incident searched, you may adjust the initial time interval and the direction of detection (backward or forward in time).
 - Use a larger interval to detect significant or semi-permanent changes to the current camera view, that occurred days before or after the current time stamp (e.g. set the interval to One Day to detect damage to a building that occurred within the past week.)
 - Use a smaller interval to detect short-term, transient incidents that occurred within hours or minutes of the current time-stamp (e.g. use the default 10-minute interval, or even a 1-minute interval to detect a car that had parked within half an hour of the currently displayed video.)
5. Click on the Search Back/Forward buttons [, depending on the desired direction of detection, to generate the next set of thumbnails, starting at the time-stamp of the bottom-right thumbnail.
6. Once a change has been detected between two consecutive thumbnails, indicating that the incident has occurred in the time between the two frames, click on the first of the two (if searching back in time; click in the second frame if searching forward in time). The selected thumbnail will populate the Timeslice Current View pane, and the Timeline will move to the selected thumbnail's time stamp.
7. Select a smaller interval and click the Search Back/Forward buttons to generate thumbnails of smaller intervals, and repeat the process until the exact start or end time of the incident is accessed.
8. At this point, you can:
 - Apply motion detection to the Timeslice Current View pane: motion detection can be applied to the Timeslice Current View pane in the same manner as any Browse Mode pane. See 'Motion Detection' (page 29) for more information.

- Review the selected camera or the entire camera view at the time of the detected event: click on the camera's title bar to expand it to full-view, or click 'Overview' in the main title menu to resume multi-camera browsing.
- Export video and/or still images for evidence: see 'Exporting Evidence', page 42.

Note:

If no video is recorded at a Timeslice point, the Time Slicer will search for and display the next frame of recorded video (both backward and forward in time.) Time Slicing will resume from that point on at the set interval.

The Motion Slicer




Similar to the Time Slicer, the Motion Slicer enables instant detection of motion events, adjusted for the duration of the event and level of motion.

Accessing video of an incident using the Motion Slicer

1. Within the Time Slicer, click on 'Motion'.
2. Set the Motion Slice detection parameters, based on the nature of the motion detected. The sampling frequency, denoted in intervals ranging from frame-by-frame to 1 minute, complies to the speed of the object or duration of the event. The percentage of change determines the minimal number of changed pixels (from within the digitally-zoomed image) for an event to be detected.

Note:

For more information about setting motion detection parameters, see 'Motion Detection', page 29.

3. Draw a Motion Detection zone using the motion detection tool  in the Browse Mode toolbox.
4. Click on the Back/Forward buttons , depending on the desired direction of detection, to generate thumbnails of detected motion events. At any point during the detection process you may click the pause button  to abort the operation.
5. If needed, adjust the detection parameters and repeat the search. Unless a different thumbnail from the first is selected, or the timeline is moved, the search will resume from the same point.
6. Once the maximum number of twenty thumbnails per page is reached, the Motion Slice process will halt. To continue, click on either the Back or Forward buttons to resume detection.
7. Once the desired motion event is accessed, you can:
 - Apply motion detection to the Motion Slice Current View pane: motion detection can be applied to the Motion Slice Current View pane in the same manner as any Browse Mode pane. See 'Motion Detection' (page 29) for more information.
 - Review the selected camera or the entire camera view at the time of the detected event: click on the camera's title bar to expand it to full-view, or click 'Overview' in the main title menu to resume multi-camera browsing.
 - Export video and/or still images for evidence: see 'Exporting Evidence', page 42.

Alerts

NVR Alerts, messages generated by the NVR in response to events such as motion detection instances or generic events received from external systems (e.g. access control, emergency phones, etc.) may also be used in Time Slicing.

Note:

See the NVR's user manual for more information about setting alerts.



The Alerts List

Accessing video of an incident using Alerts

1. Within the Time Slicer, click 'Alerts'
2. Browse by Server, Camera and Alert and select the desired alert.
3. Starting at any point in the timeline, click on the Back/Forward buttons [⏮ ⏭], depending on the desired direction of viewing alerts. This will populate the screen with thumbnails of the camera at the time of each alert. At any point during the detection process you may click the pause button [⏸] to abort the operation.
4. Hover over a thumbnail to enlarge it, or click to set the Timeline and the Currently Displayed Camera pane to the time stamp of the alert.
5. Once the maximum number of twenty thumbnails per page is reached, the Alerts process will halt. To continue, click on either the Back or Forward buttons to present the next set of alerts.

Note:

The camera associated with the alert can be different from the one currently displayed; in such a case the alert thumbnails will show the displayed camera at the time stamps of the selected alert.

6. Once the desired event is accessed, you can:
 - Apply digital Zoom to the Currently Displayed Camera pane
 - Apply motion detection to the Currently Displayed Camera pane: motion detection can be applied in the same manner as any Browse Mode pane. See 'Motion Detection' (page 29) for more information.
 - Review the selected camera or the entire camera view at the time of the detected event: click on the camera's title bar to expand it to full-view, or click 'Overview' in the main title menu to resume multi-camera browsing.
 - Export video and/or still images for evidence: see 'Exporting Evidence', page 42.

Sequences

Sequences are messages generated by the NVR indicating a sequence of events. Each sequence may include one or more instances of motion, or alerts received from external sources, making this method more suitable for accessing complex incidents. The NVR's motion detection utility may be configured to include a few seconds of pre- and post-event video.




Note:

See the NVR's user manual for more information about motion detection settings.



Generating Sequences

Accessing video of an incident using Sequences

1. Within the Time Slicer, click on 'Sequences'
2. Starting at any point in the timeline, click on the Back/Forward buttons [ ], depending on the desired direction of viewing alerts. This will populate the screen with thumbnails of the starting point or end point of each sequence (for generating sequences forward and back in time, respectively). At any point during the detection process you may click the pause button [] to abort the operation.
3. Hover over a thumbnail to enlarge it, or click to set the Timeline and the Currently Displayed Camera pane to the time stamp of the sequence.
4. Once the maximum number of twenty thumbnails per page is reached, the sequence-generating process will halt. To continue, click on either the Back or Forward buttons to present the next set of sequences.
5. Upon accessing the desired sequence, you may:
 - Apply digital Zoom to the Currently Displayed Camera pane

- Apply motion detection to the Currently Displayed Camera pane: motion detection can be applied in the same manner as any Browse Mode pane. See 'Motion Detection' (page 29) for more information.
- Review the selected camera or the entire camera view at the time of the detected event: click on the camera's title bar to expand it to full-view, or click 'Overview' in the main title menu to resume multi-camera browsing.
- Export video and/or still images for evidence: see 'Exporting Evidence', page 42.

Triggers

Ocularis Client/Client Lite enables triggering outputs (relays) for activating external devices such as electronic locks and gates, camera presets, switching lights on and off, alarm systems, etc. Triggers can be associated with individual cameras or with NVR servers.

A single trigger may include one or more actions, e.g. a button trigger can sound an alarm and send a PTZ camera to a specific preset.

All triggers are configured in the NVR; please refer to the NVR user manual for more information.




Generating Sequences

To activate a trigger, click on 'Triggers' in the main menu, and expand the lists of triggers under the desired camera or server.

Client Setup

The 'Client Setup' screen, located by selecting **Views...Client Setup** allows users to customize their *Ocularis Client/Client Lite* experience. Here, the user can control how the software is displayed, the language used and features related to browsing.

1. To configure settings for *Ocularis Client/Client Lite*, click the 'Views' menu and select 'Client Setup'.

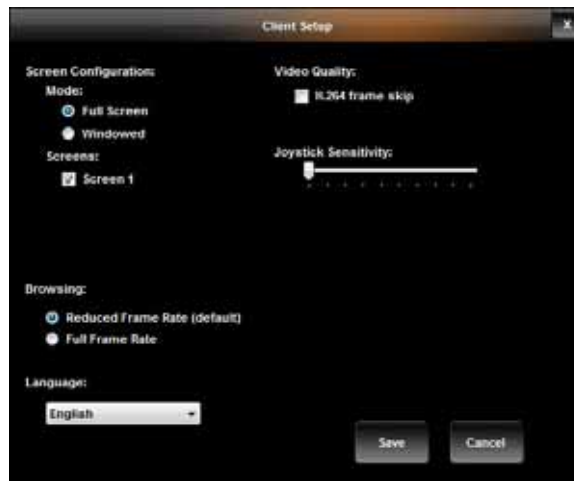

The 'Client Setup' Dialog Box

2. The default Screen Configuration is to display Ocularis Client in full screen mode on all connected monitors. If you prefer, you may display the Ocularis Client in a resizable window, by selecting 'Windowed' mode.
3. The number of screens detected by the PC's video card will be represented by checkboxes in the Screen Configuration section. Check at least one screen or as many as shown on which to display Ocularis Client.
4. If using H.264 or MPEG compression, there may be a ghosted image in some displays. To avoid this, click the 'H.264 frame skip' checkbox under 'Video Quality'.
5. Use the 'Joystick Sensitivity' slider to adjust both real and virtual joystick movement. The left of the slider bar indicates maximum sensitivity; the right side of the slider bar is the least sensitive. So, for instance, to instruct the smallest of joystick inputs to be passed along as PTZ commands to the NVR, move the slider to the left on the slider bar.
6. In the 'Browsing' section, to save bandwidth and maintain performance when browsing recorded video, select 'Reduced Frame Rate'. (the default option). Click 'Full Frame Rate' if you require all view panes to display video with full frame rate during playback of recorded video.
7. If you wish to change the display language for Ocularis Client, you may do so by selecting it from the 'Language' drop-down menu.

8. Click 'Save' to save changes.

The changes made on this screen will not be visible until the user logs off and back in to *Ocularis Client/Client Lite*. The language change will not take effect until the user shuts down and restarts the *Ocularis Client*.

Exporting Evidence (Video and Still Images)

Ocularis Client or *Ocularis Client Lite* enables exporting video in audio-included AVI format, as a multi-camera video database, or as a single still image or series of images in JPEG format. The following export topics will be discussed here:

- Designating a range for exporting video
- Exporting an AVI video clip
- Exporting a Video Database
- Exporting Still Images (individual frames)
- Printing a Still Image Report
- Bookmarks (available only in *Ocularis Client*)




Exporting Video Evidence

Designating a range for exporting video

This step must be performed when exporting any video clip. It is not necessary for exporting a single still image or printing.

Note:

Video export is possible only in Browse mode (including Timeslice, Motion Slice, Alerts and Sequences modes).

1. Make sure the interchangeable motion detection/playback control set is set to playback. Click on the Playback Mode button [] to toggle between the two sets of controls.
2. Drag the Timeline to the desired starting point for the exported segment, and click on the Segment Start button [].
3. Drag the Timeline to the end point of the exported segment. The selected segment will turn purple. Click on the Segment End button [].



Designating a range for exporting video

4. You may extend or reduce the segment after it has been designating by setting different start and end points.

Exporting an AVI video clip


Audio-included, single-camera AVI clips have relatively small file sizes, allowing for electronic distribution of evidence across multiple platforms. Each frame in the clip is time-stamped, and an optional preamble including the time/date, camera ID, operator and operator's comments will precede the clip.

1. Once a segment of video has been designated for export, click on 'Export' in the main menu.




The 'Export Options' Dialog Box

2. Select 'AVI File'.

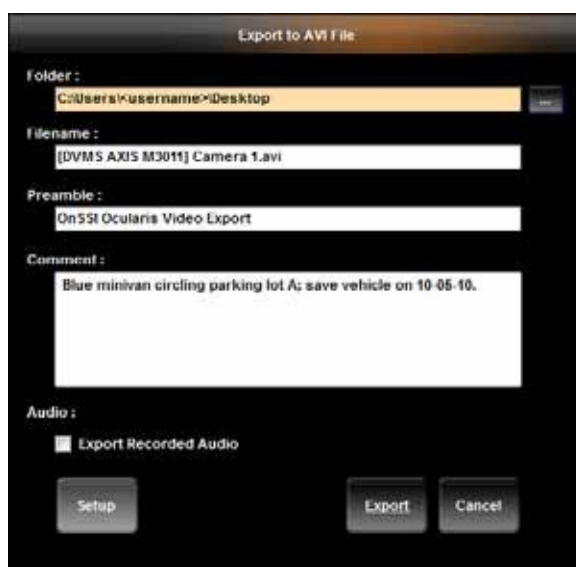

Exporting to AVI File

3. Enter the full path of the destination folder for the exported clip, or click on Browse Folders  to select a folder or to create a new folder.
4. Enter a file name for the exported clip.
5. Enter Preamble text to display in the beginning of the video as an introduction.

By default, exported AVI clips are preceded by a Preamble which displays the time and date, operator (by username), camera name and the operator's comments. You may choose whether or not to append a preamble to the exported clip, and which items to include.




The AVI Video Preamble

6. Enter additional information in the 'Comment' text box.
7. Click the 'Export Recorded Audio' checkbox to include audio as part of the export.
8. Click on 'Setup' to change the video export Codec and the encoding quality.

Note:

Selecting a higher encoding quality may cause the encoding process to take longer and the AVI file to be larger; also, the export codec must be installed on the video clip recipient's computer. To avoid incompatibility, we recommend using a popular video codec such as DivX.

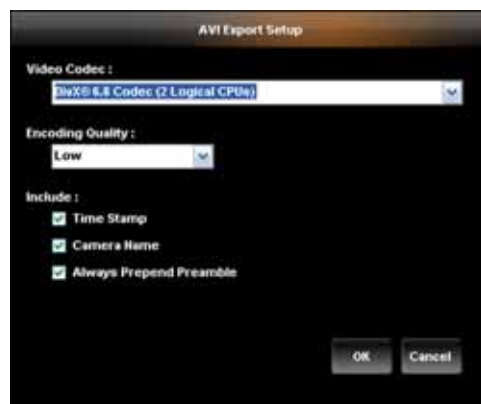

The AVI Export Setup Dialog Box

9. Click 'OK' to exit the Setup dialog box.
10. Click 'Export' to begin the export process.

Depending on the length of the designated segment of video and on the framerate and resolution of the video, the encoding process may take a number of minutes. You can follow the encoding progress by

clicking on 'Jobs' in the main menu.

Note:

You may continue to work with Ocularis Client/Client Lite as usual during the export process, including running multiple video exports simultaneously.


Viewing an Exported AVI Video Clip

Once a video clip is exported to an .avi file, it can be viewed with any application that supports playing .avi files such as Windows Media Player or QuickTime.


Exporting a Video Database

Multiple-camera video exports in database format allow future reviewing of an event as it unfolds through an entire set of cameras. While exported database files may be very large and therefore are not usually suitable for electronic distribution, their encryption and password-protection features provide the security level required in dealing with sensitive content and/or court evidence. Viewing the exported video database requires *Ocularis Client*, *Ocularis Client Lite* or the *Ocularis Viewer* to be installed on the recipient's computer.

1. Once a segment of video has been designated for export, click on 'Export' in the main title menu.
2. From the 'Export Options' screen, select 'Database Format'.

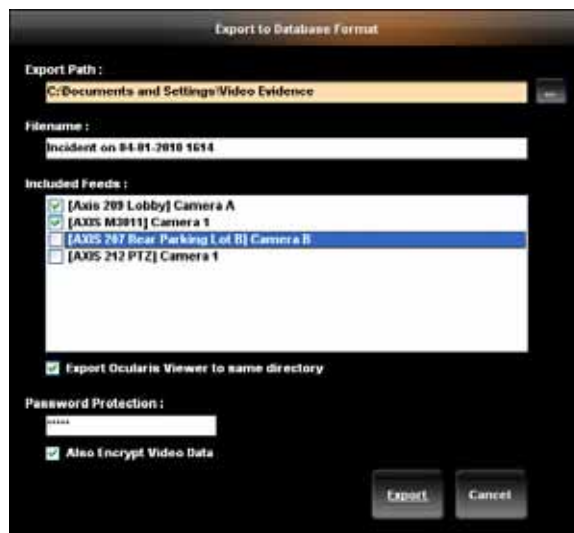

The Export to Database Format Dialog Box

3. Enter the full path of the destination folder for the exported clip, or click on Browse Folders  to select a folder or create a new folder.
4. Enter a file name for the exported clip.
5. Choose the camera feeds to be included in the database export in addition to the selected camera, from among current view's cameras. To include a camera feed not included in the original view, change the camera using the 'Circular Control' in either Live or Browse modes.
6. If the recipient of this video clip does not have *Ocularis Client* or *Ocularis Client Lite*, you should include the *Ocularis Viewer* as part of the export. To include the *Ocularis Viewer* in the destination folder, check the 'Export Ocularis Viewer to same directory' checkbox. More information on the *Ocularis Viewer* is discussed later in this section.

7. If you want to encrypt the clip, enter a password for opening the database and check the 'Also Encrypt Video Data' checkbox. Encryption requires password protection.
8. Click 'Export' to begin the export process.

Depending on the length of the designated segment of video and on the framerate and resolution of the video, the encoding process may take a number of minutes. You can follow the encoding progress by clicking on 'Jobs' in the main menu.

Note:

You may continue to work with Ocularis Client/Client Lite as usual during the export process, including running multiple video exports simultaneously.

Exported Results

Once the export process is finished, the following will be found in the destination folder:

- a '[filename].oml' file
- a folder named 'Data'
- a folder named 'Ocularis Viewer' (if the option to 'Export Ocularis Viewer to same directory' checkbox was selected)

The first two items are required to view the exported video in any format. The Ocularis Viewer folder is only necessary if the recipient does not have *Ocularis Client* or *Ocularis Client Lite*.

To transfer the video export to another user, simply copy the exported items onto a portable hard drive, or burn them on a CD or DVD using any off-the-shelf burning software.

Viewing an Exported Video Database

Viewing an exported video database can be done by using the *Ocularis Client*, *Ocularis Client Lite* or the *Ocularis Viewer*.

Viewing Exported Video with Ocularis Client/Ocularis Client Lite

To view exported video using the *Ocularis Client* or *Ocularis Client Lite*:

1. Select the 'Load Database from File' option under the 'Views' menu
2. Select the .oml file in the 'Open' dialog and click Open.

The video database will open in Browse mode, allowing for all Browse operations (including motion detection, Timeslice, Motion Slice, etc.)

Note:

It may take a short period for the video database to parse and recorded video to be available for browsing.



Loading a video database in Ocularis Client

Viewing Exported Video with Ocularis Viewer

For occasions when a user does not have the *Ocularis Client* or *Ocularis Client Lite* installed, a stand alone video viewing application called the *Ocularis Viewer* is available to view recorded database video.

Note:

Be sure to copy the Ocularis Viewer to the PC that will be playing the exported video.

The *Ocularis Viewer* is installed during the installation of *Ocularis Client* or *Ocularis Client Lite*. It is also exported to a folder when you export video and select the 'Export Ocularis Viewer to same directory' option.

See the *Ocularis Viewer User Manual* for instructions on how to use the *Ocularis Viewer*.

Exporting Still Images (individual frames)

Rather than full-motion video, you may want to export a still image or series of still images from *Ocularis Client/Client Lite*. Single-camera still images can be extracted either as single frames or multiple frames, covering the entire export range.



Exporting Still Frames

To export a Single Frame

1. From Browse mode, select a camera, and set the Timeline to the desired point in time, with the desired image displayed.
2. Click on 'Export' in the main menu and select 'Individual Frames'.
3. Check the 'Single Frame' radio button.
4. Click on 'Setup' to set the Still Image export parameters:

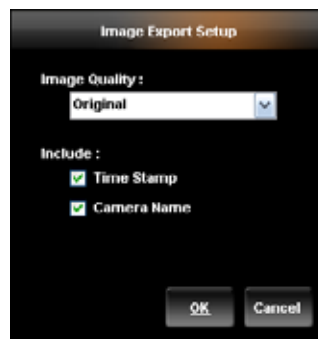


Image Export Setup

5. Set the image quality to Original, Medium or Low. Exporting images in 'Original' quality will result in larger file size, while reducing the image quality may cause image degradation.
6. Check the 'Time Stamp' and 'Camera Name' checkboxes to include camera and timestamp information in the export.

7. Click 'OK' to return to the 'Export Still Frame' dialog box, and click on 'Export'.

You may view the exported .jpg image with any application that supports this file type.

To export all frames from the selected range

1. From Browse mode, select a camera.
2. On the Timeline, set the start and end points for the exported segment (see 'Designating a range for exporting video', page 42).
3. Click on 'Export' in the main title menu and select 'Individual Frames'.
4. Check the 'Full Timespan' radio button.
5. Click on 'Setup' to set the Still Image export parameters:
6. Set the image quality to Original, Medium or Low. Exporting images in 'Original' quality will result in larger file size, while reducing the image quality may cause image degradation.
7. Check the 'Time Stamp' and 'Camera Name' checkboxes to include camera and timestamp information in the export.
8. Click 'OK' to return to the 'Export Still Frame' dialog box, and click on 'Export'.

You may view the exported .jpg images with any application that supports this file type.

Printing a Still Image Report

Still Image Reports are one-page reports which include a still image as well as the associated time/date, camera information, operator and workstation identifiers and operator comments.

To Generate a Print Report

1. From Browse mode, select a camera, and set the Timeline to the desired point in time.
2. Click 'Export' in the main menu and select 'Print'.
3. Enter a report Header, report Footer and Comments.
4. Click 'Preview' to view the final report prior to printing.



Still Image Report

5. Click 'Print' to print the report, using any local or networked printer.

Bookmarks

The feature of bookmarking video clips is available with *Ocularis Client* when used with Ocularis Base Server. A bookmark is simply an exported video clip that is stored centrally on the same machine as the Ocularis Base Server. A bookmarked video clip allows easy access to all users logged in through Ocularis Base. Bookmarks may be assigned to an incident case and be categorized by classification or tag to facilitate organization. Like the Database Format export, bookmarks may include multiple cameras (audio and video).


The ability to create a bookmark is controlled in the *Ocularis Administrator* application on a camera by camera basis for each user group. You may have the privileges to bookmark video from Camera A but not Camera B. Contact your system administrator for assistance.

Creating a Bookmark

1. From Browse mode, designate a segment of video for export. See 'Designating a range for exporting video', page 42.
2. Click 'Export' in the main menu.
3. Select 'Create Bookmark'.

If this button is disabled:

- Check that you are logged in to the Ocularis Base Server (using *Ocularis Client*) rather than directly to the NVR (using *Ocularis Client Lite*).
- You may not have bookmarking privileges. Check with your system administrator.

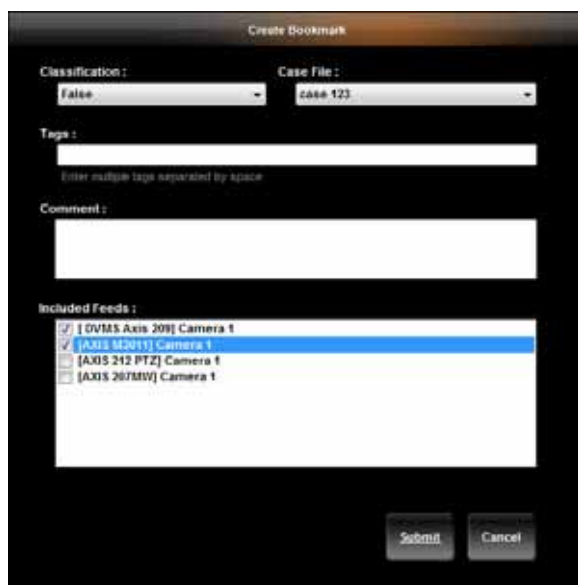

The Create Bookmark Dialog Box

If there are expected cameras missing from the resulting list, you may have limited privileges for bookmarking. Check with your system administrator.

4. Select a *Classification* to file the bookmark under based on the nature of the clip. Items in this list are configured in the *Ocularis Administrator*.
5. Select a *Case File* for the clip to be assigned. A Case File is an incident case which may contain multiple bookmarks or alerts related to the same event. Case File designations are created and configured in the *Ocularis Administrator*.
6. Enter any *Tags* for the clip. Tags are keywords related to the clip content. Tags are created here and may be deleted in the *Ocularis Administrator*.
7. Enter any comments related to the clip or its contents
8. Choose the camera feed(s) to be included in the bookmark export in addition to the selected camera, from among current view's cameras.
To include a camera feed not shown in the original view, cancel the 'Create Bookmark' dialog and modify one of the view panes to display the desired camera using the 'Circular Control'. Then, click 'Export' and repeat steps above.
9. Click 'Submit' to create the bookmark.


Click 'Jobs' on the main menu to confirm the creation of bookmarks during the current logged in session.

Bookmarks are stored on the same machine where the Ocularis Base Server software is located. They are stored in the directory: `c:\inetpub\wwwroot\OcularisService\Bookmarks\Data`

Viewing a Bookmark


Viewing a bookmark is supported when using *Ocularis Client* with Ocularis Base Server.

1. Click 'Views' in the main menu.
2. Select 'Tools' and then 'Bookmarks'.

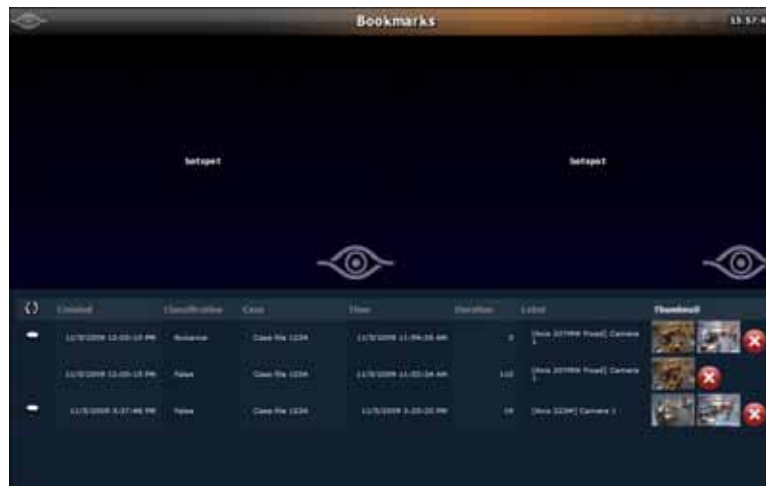

Bookmarks

The resulting screen displays a list of existing bookmarks in the lower half and a 2 x 1 view with hotspots in the upper half.

3. Sort the list of bookmarks by clicking on the column heading.
4. Click the comment balloon to view bookmark comments. 
5. Position the mouse over a Thumbnail to see an enlarged view of the thumbnail image.
6. Click a hotspot pane and then a thumbnail to view video from that Thumbnail.

The hotspot will show a still image of the start of the bookmark video clip.

7. Position the mouse over the pane to see the navigation controls for that pane. Use these controls to view the video.

Alerts

The Alerts feature is available when using *Ocularis Client* with Ocularis Base Server. It encompasses the following features:

- Blank screen monitoring
- Storing and handling alerts
- Access of stored alerts
- Visible alert location on a map

Alerts are generated when a configured event occurs. The event can be as simple as motion detected on a camera to complex composite events that combine multiple events into one (e.g. when there is motion on camera A and a card swipe is detected from an access control system, generate an alert). Alerts may be configured on the NVR itself or from the *Ocularis Administrator*. The *Ocularis Administrator*, however, controls the distribution of an alert regardless of where it was configured. When an operator is logged in through Ocularis Base, alerts are forwarded to the *Ocularis Client*.

Note:

Alert notification is controlled on a distribution group and schedule basis. If you do not see an expected alert it may be because either your user account was not given adequate permission or the time period for which you should receive the alert has passed. See your system administrator for assistance.


Blank Screen Monitoring

Blank Screen monitoring is an effective way to notify an operator when an event occurs. The view pane is 'blank' until an event occurs and video from the alert is pushed to the blank screen pane. This eye-catching method of video display draws the attention of the operator to video where some action is taking place.

Configuring a view pane with a Blank Screen is done in the *Ocularis Administrator* and therefore, this function is supported only when using *Ocularis Client* with Ocularis Base Server. For instructions on Blank Screen configuration in *Ocularis Administrator* see the *Ocularis Administrator User Manual*.

Using Blank Screen Monitoring

Once a view is created with a Blank Screen pane, to use it, simply display the view. Select the 'Views' menu and choose the view containing the Blank Screen.

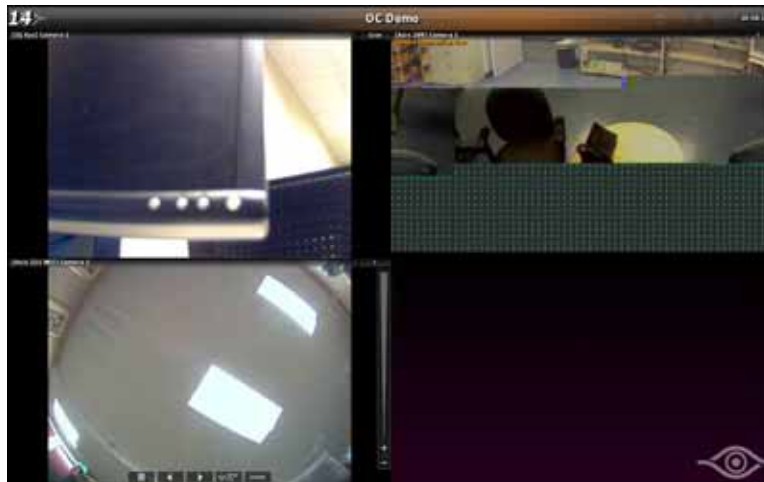

Blank Screen
pane

A View with a Blank Screen pane

When an alert occurs, video will be populated in the Blank Screen pane.



Alert triggered
video

A motion alert triggered video on the Blank Screen

If you position the mouse over the Blank Screen pane, navigation controls appear allowing you to play or pause the alert video.



Navigation Controls

Alert Counter

An *Alert Counter* appears in the upper left corner of the screen to indicate the number of alerts received in the current session. When you log in, you will be presented with the last 20 alerts directed to your user account as configured by the system administrator.



Alert Counter appears in the upper left corner of Ocularis Client

Alert Priorities

Administrators assign priorities to each alert using the *Ocularis Administrator*. (See the *Ocularis Administrator User Manual*.) Priorities are identified in *Ocularis Client* by a colored outline displayed around the Blank Screen pane.



High Priority Alert

The outline color code for alerts is defined as follows:

- Green = low priority alerts
- Yellow = medium priority alerts

- Red = high priority alerts

Low and Medium level alerts remain visible in a Blank Screen pane for about 10 seconds (default time) and then they are cleared. High priority alerts remain visible on the Blank Screen pane until they are acknowledged by an operator.

An audible sound may be heard when an alert is triggered. The sound may be different for each alert regardless of priority. Audible alerts are configured by the system administrator in the *Ocularis Administrator* application.

Alerts go either to the 'Alert Manager' or the 'Handled Alerts' list and may be investigated and reviewed at a later time.

Clearing an Alert from a Blank Screen

High Priority Alerts

A High priority alert remains visible until an operator clears it from the Blank Screen pane. Click the 'Acknowledge' button above the navigation controls to acknowledge the alert and clear the pane. You can handle the alert now or at a later time. See [Handling Alerts](#) on page 62 for more information.



Medium and Low Priority Alerts

Since Medium or Low priority alerts display on the blank screen temporarily, there is an option to *pin* the video to the pane until such time as it is cleared manually.



- Click the 'Pin' button when viewing a low or medium priority alert to keep the video displayed.
- Click the 'Close' button to clear the video from the Blank Screen and move the alert to the Alerts Manager. It can be reviewed and handled at a later time.
- Click 'Acknowledge' to handle the alert now. It will then be moved to the 'Handled Alerts' list.

See [Handling Alerts](#) on page 62 for more information.

Alert Manager


The *Alert Manager* is a component supported by *Ocularis Client* when used in conjunction with the Ocularis Base Server. The Alert Manager is a list of alerts that have been triggered but have not yet been handled. You can view, sort, store and review alerts. You can also locate alert locations on a map.

Launch the *Alert Manager* by one of the following methods:

1. From the main menu, select: *Views* → *Tools* → *Alert Manager*.




2. Or click the *Alert Counter* found in the upper left corner of the screen.

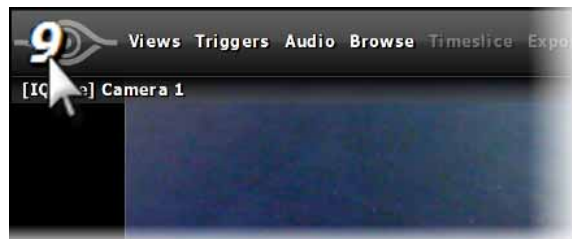

Click the Alert Counter to launch the Alert Manager

The *Alert Manager* appears.

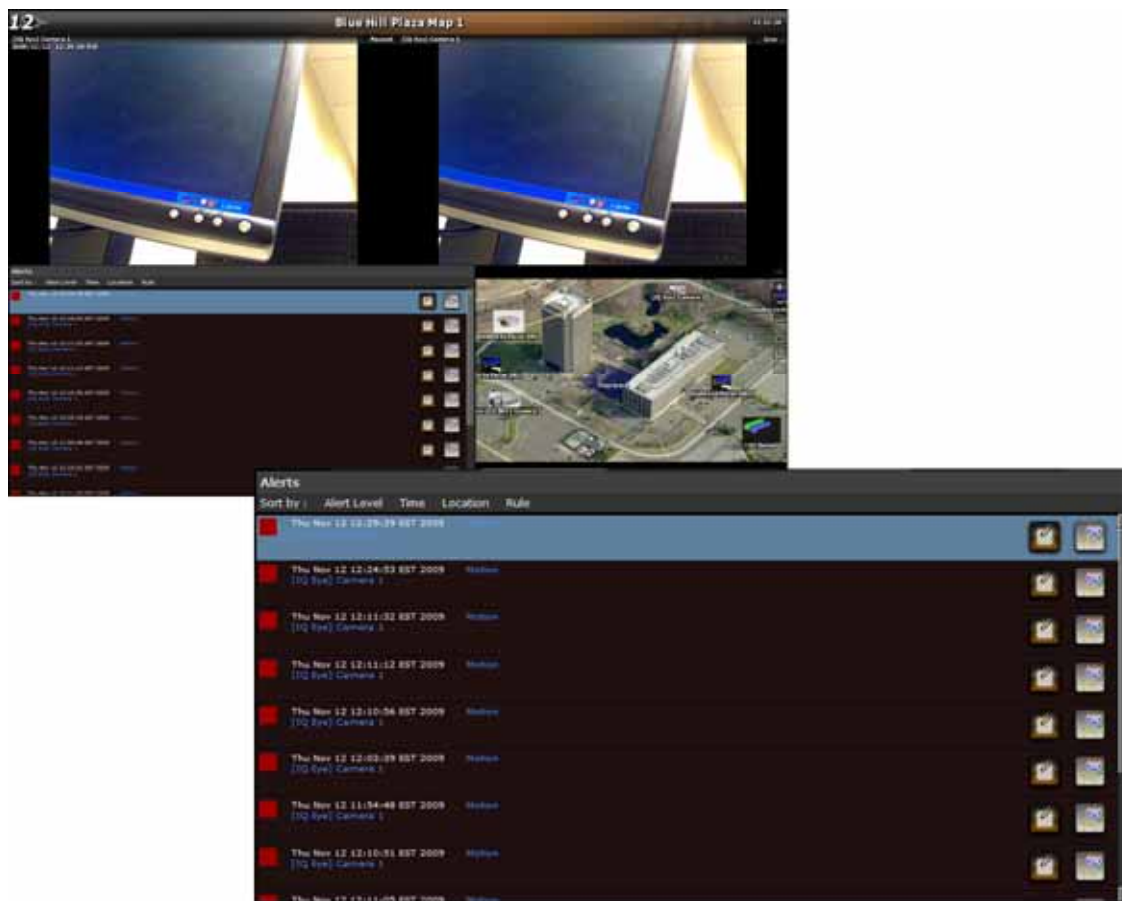*Alert Manager*

The Alert Manager screen contains 4 quadrants. In the lower left quadrant, is an alert list for all received and 'unhandled' alerts. Above the alert list in the upper left quadrant is a pane displaying recorded video of the alert selected in the alert list. In the upper right quadrant is live video for the camera found in the alert. In the lower right quadrant, is a map which displays the camera for the selected alert.

Locating Alerts on a Map

Manually Locating Alerts

While viewing the Alert Manager, you can locate the camera whose event triggered the alert by selecting the alert from the Alert List and clicking the 'Locate Alert' button.




The map with the selected camera will display, centered on the camera related to the alert.

Automatic Alert Location

While viewing a map (from the Alert Manager or Ocularis Maps), if an alert associated with a displayed camera is triggered, the corresponding camera icon will pulsate. A color outline corresponding to the alert priority (red for high, yellow for medium, green for low) appears around the camera.

From the Alert Manager, click the pulsating icon to review the alert for that camera.

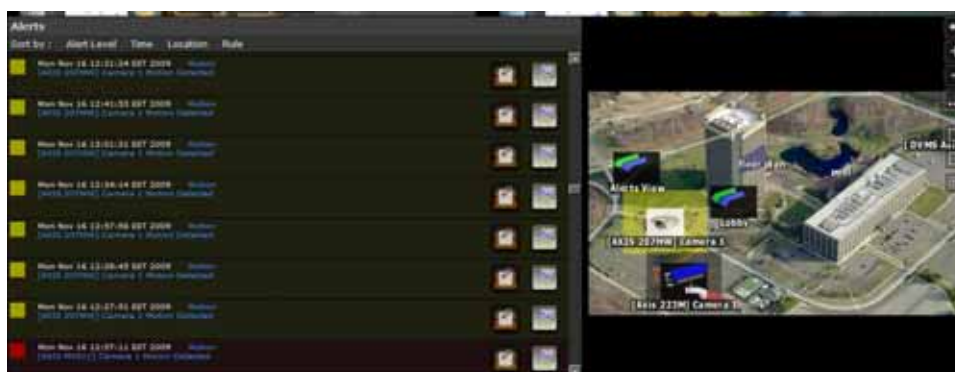

Camera icons pulsate to notify that an alert is taking place

Storing and Handling Events

As alerts are received and reviewed, operators can choose to file or store the events for later retrieval. Alerts in the Alerts List are only sustained for the current *Ocularis Client* session. Therefore, important alerts should be saved and categorized ('Handled') so that they may be viewed at a later time.

Handling Alerts

1. From the *Alert Manager*, click the 'Handle Alert' icon for the alert you wish to save.
2. Fill out the fields in the resulting 'Handle Event' pop-up window.



Handle Event

3. Select the category for the alert from the 'Classification' drop-down list. These Classifications are defined in the *Ocularis Administrator* by the system administrator.
4. Select an existing incident case file from the 'Case' drop-down list. Click the '+' to add a new Case File.
 - a. In the event you wish to add a new case file on the fly, enter the case name in the 'Name' field and any comments specific to this file.
 - b. Click 'Submit'.
 - c. Be sure to select the new case from the 'Case' drop-down list.
5. Enter keywords to be used as search tags for the incident in the 'Tags' field.
6. Enter specific comments regarding the alert incident in the 'Comments' field.
7. Click 'Submit'.


The alert is removed from the alert list and can be accessed at a later time under 'Handled Alerts'.

Accessing Stored (Handled) Alerts

Once alerts have been handled, they can be accessed at any time.


1. From the main menu select: *Views* ➔ *Tools* ➔ *Handled Alerts*.

The result is a list of all handled alerts.

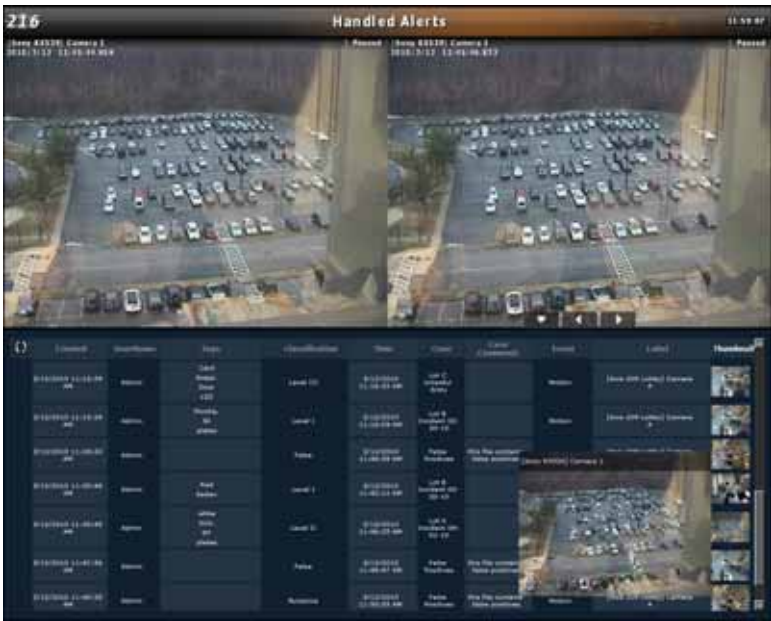

Accessing Handled Alerts

 In the lower half of the screen, a table is displayed with each row representing a handled alert. The following columns are provided in the table:

Refresh	Click the icon  to refresh the list and view alerts handled by others while viewing this screen.
Created	The date and time stamp the alert was generated.
UserName	The name of the user who handled the alert.
Tags	Keywords entered when the alert was handled will display in the Tags column.
Classification	The classification category assigned to the alert.
Time	The date and time when the alert was handled.
Case	The incident case file name to which the alert was assigned.
Case Comments	Any comments associated to the case file will display here.
Event	The type of event that caused the alert to trigger.
Label	The name of the camera video displayed as a result of the event. It may or may not be the same camera whose event triggered the alert.
Thumbnail	A thumbnail of the video for the alert. Hover the mouse over the thumbnail to view a larger thumbnail image of the alert video.

Sorting Alerts

To locate alerts more easily, click the column heading to sort the list by that column.

Viewing Alerts

To view video from a handled alert:

1. From the 'Handled Alerts' screen, click the thumbnail image of the alert you wish to view.

The upper left pane is populated with the recorded alert video. The upper right pane shows live feed from the same camera as the recorded video.
2. Hover the mouse over the recorded video (left pane) and use the navigation controls to rewind or forward the video recorded at the time of the alert.

Exporting Alert Video

While viewing handled alerts, you may have a need to export the alert video. Just as you can export video to .AVI format, database format or bookmarks while browsing, you can export video clips from a handled alert.

To export a video clip from alert video

1. From the 'Handled Alerts' screen, click the thumbnail image of the alert you wish to view.
2. Click 'Browse' from the main menu bar.
3. Use the Kinetic Timeline to set the start and end times for the video clip to be exported.
4. Click 'Export' from the main menu bar.
5. Choose your method of export from the resulting 'Export Options' box.

Ocularis Maps

Maps are supported when using *Ocularis Client* with Ocularis Base. A map is a graphical representation of the Ocularis environment and is configured in the *Ocularis Administrator* application. Using *Ocularis Administrator*, system administrators import images to be used as maps and icons to represent cameras and views on those maps. The administrator positions icons on maps, links individual maps to each other and assigns access to maps on a user group basis.

Viewing maps is done through the *Ocularis Client* from the Ocularis Maps or Alert Manager functions.

Viewing Ocularis Maps

1. From the main menu select: *Views* → *Ocularis Maps*.

The names of the installed maps are listed.

2. Select the desired map from the map list.



The map is displayed with icons for cameras and views as configured by the system administrator.

Map Navigation

Zoom in on a map in by using the scroll wheel of the mouse or clicking the zoom in icon.



Zoom out of a map in by using the scroll wheel of the mouse or clicking the zoom out icon.




Click a map link area or floating map pin to navigate from one map to another.

Click the back map navigation icon to go back to the previous map.



Image Preview

For any icon displayed on a map you can open the corresponding video image by clicking and holding the primary (left) mouse button on the icon. The preview image that appears may be resized or moved on the screen. If you hover the mouse over the preview image, navigational controls appear which allow you to review recorded video.

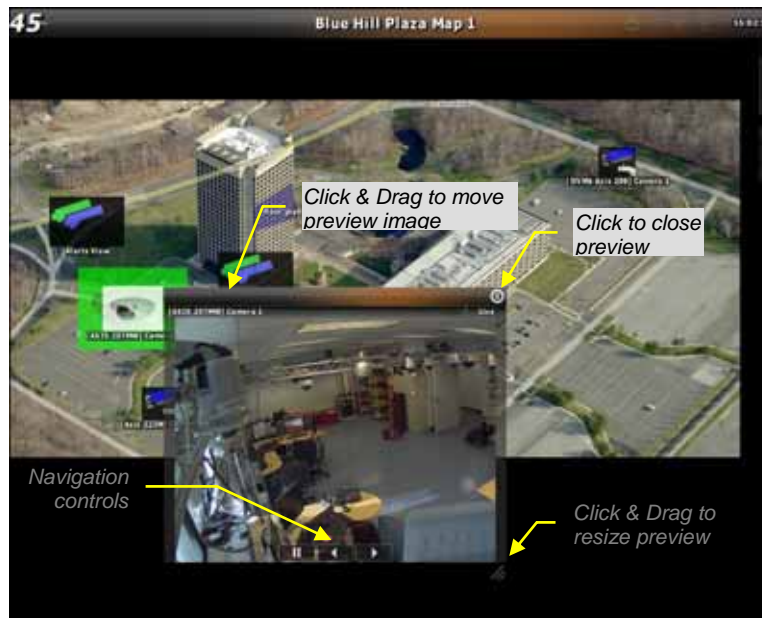

Map Preview Image

Views on a map will also generate a preview image.



Map with Multiple Preview Images

You can use the navigation icons within each view pane to navigate recorded video from the view.

Image Arrange

To automatically arrange open preview images, click the Image Arrange Icon.



Preview images are arranged at the bottom of the map.



Map showing arranged preview images

Ocularis Video Walls

Ocularis Client, when used in conjunction with Ocularis Base, supports the feature of a video wall. A *video wall* is a monitor or set of monitors used solely for the purpose of displaying video and can dynamically accept video pushed to it by system triggered events or by an operator. A video wall is simply a dedicated computer running an instance of *Ocularis Client*. No special monitoring software is needed for a video wall.

Ocularis Video Wall Configuration

Video walls are configured in the *Ocularis Administrator*. They are controlled by an operator in the *Ocularis Client* when viewing a map. On the PC(s) used as a video wall, install and log in to *Ocularis Client*. The IP address of this PC is used by the controller to send video to this unit.

Using a Video Wall

As you are viewing a map, you may encounter video from a camera or view you would like to display on the video wall.

1. Display the video wall template by selecting 'Video Walls' from the main menu.

The Video Walls menu lists all configured video walls.

Note:

Access to video walls can be restricted based on privileges assigned to the user account in the Ocularis Administrator.


2. Select the desired video wall.

The panes of the selected video wall are graphically displayed.



Virtual Video Wall panels

3. Drag & Drop a camera from the map to a pane on the virtual video wall.

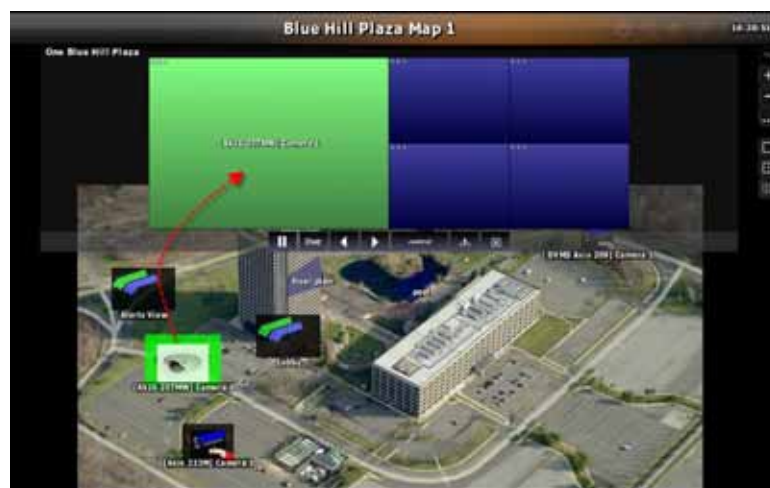

Drag & Drop a camera onto a Virtual Video Wall pane

The virtual video wall will display the camera name and the actual video wall will display the video from that camera.



Image from Axis 207 MW displayed in Remote Video Wall




4. Drag & Drop a view from the map to a pane in the virtual video wall to display an entire view on the video wall.

Tip: *If you drop a view that contains a blank screen onto a video wall, the blank screen alerts will also display on the video wall.*

Changing Video Wall Panes

From the controller PC, you may change the pane arrangement on the video wall remotely. Using the video wall icons on the side bar, you can set the virtual video wall to a 1, 4 or 9 pane view.

1. While viewing an Ocularis Map, select the desired video wall from the Video Walls menu.
2. Select the pane which you want to change. The selected pane is displayed in green.
3. Click corresponding video wall icon:

Click:	To display a:
	1 pane view
	4 pane view
	9 pane view

4. Now you may populate these panes by dragging & dropping icons from a map to the pane.

Managing Video in a Video Wall

Operators may control the video displayed in a video wall including pausing, rewinding and forwarding displayed video.

1. With the desired Ocularis Map and virtual video wall displayed, drag & drop camera video or a view to the video wall.

A set of virtual video wall controls appears.



2. Select the pane which you want to control and use the icons on the virtual video wall controls.

Remote Control

If a video wall is visible from the controlling station, the video on the display can be controlled with the 'Pause', 'Play backward/rewind' and 'Play Forward' buttons. However, in cases where the video wall is not visible from the controlling station (because it is too far away or in another physical location), use the 'control' button to open a local preview of what is displayed on the video wall.




Viewing a video wall pane remotely

Use the navigation controls at the bottom of the preview pane so that you can see what is displaying on the remote video wall.

Camera Location

While working with an Ocularis map and video wall, you can auto locate the camera icon on the map which is displaying in the video wall.

1. Click the pane in the virtual video wall with the camera video you would like to locate.
2. Click the 'Locate Camera Video' icon. 

The Ocularis map repositions with the camera icon centered on the screen.

Clear a Pane in a Video Wall

1. Click the pane in the virtual video wall with the camera video you would like to clear.
2. Click the 'Clear Video' icon. 